 



OPERATION MANUAL
Model : MR-02, MR-02H

FUNCTION ON REMOTE CONTROL


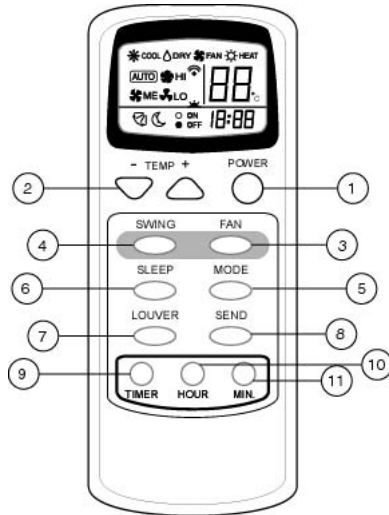


- 1 POWER = ON/OFF THE AIR-CON
- 2 TEMP - + = ADJUST SETTING TEMPERATURE
- 3 FAN = SELECT FAN SPEED
- 4 SWING = ON/OFF SWING FUNCTION
- 5 MODE = SELECT OPERATION MODE
- 6 SLEEP = ON/OFF SLEEP FUNCTION
- 7 LOUVER = SELECT ANGLE OF LOUVER
- 8 SEND = RESEND THE SETTING
- 9 TIMER = SELECT AUTOSTART/ STOP FUNCTION
- 10 HOUR = ADJUST HOUR UNIT
- 11 MIN. = ADJUST MINUTE UNIT

 
1 **POWER** : Pressing **POWER** button will turn on or off the air conditioner. When turn on, it will operate according to the setting shown on the Remote unit.

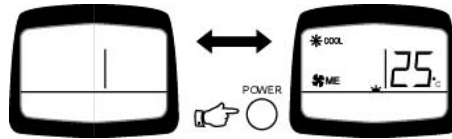


2 **TEMP- +** : Pressing **TEMP - +** button is to adjust the setting temperature range between 15-30 °C.
TEMP - + is not valid in FAN mode

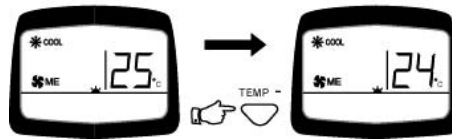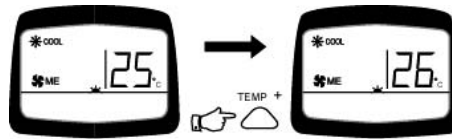

3 **FAN** : Pressing **FAN** button button is to select the fan speed; high, medium, low and auto fan respectively.
FAN function is not valid in dry mode

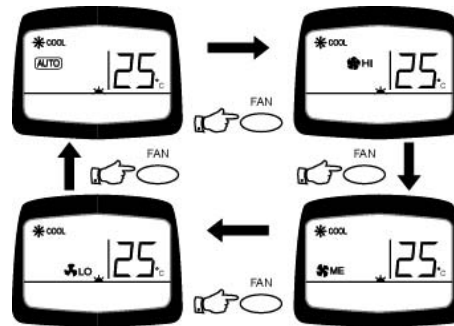

4 **SWING** : Pressing **SWING** button will on/off the swing motor.

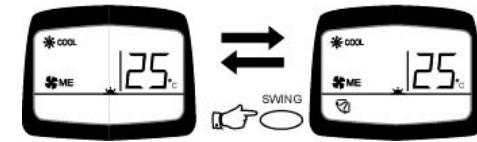


5 **MODE** : Pressing **MODE** button is to select the operation mode; COOL, DRY, HEAT and FAN respectively.

COOL : The system will operate as air-conditioner


DRY : The system will operate as dehumidifier.
(SLEEP and FAN function is not valid in this mode)

FAN : The system will operate as the fan only.
(SLEEP, TEMP- + function is not valid in this mode)

HEAT : The system will operate as heater.

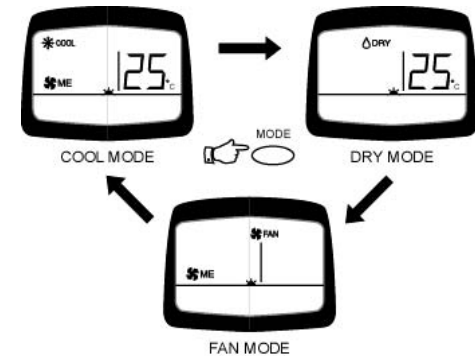

(MR-02)

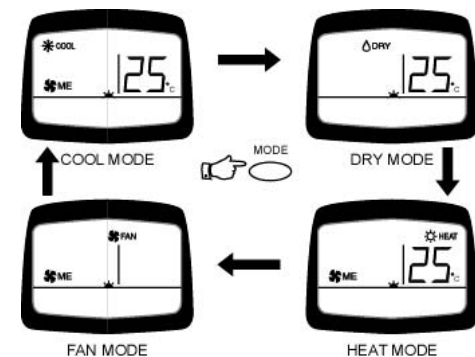

(MR-02H)


6 **SLEEP** : Pressing **SLEEP** button will start the sleep function.

In cool mode, the setting temperature will be raised up by 1°C after one hour automatically.

In heat mode, the setting temperature will decrease by 1°C after one hour automatically.

To cancel this function, by pressing **SLEEP** again or **MODE**.

This function is valid in only cool and heat mode


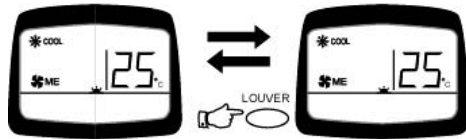


7 **LOUVER** : Pressing **LOUVER** button is to change the angle of louver (working by stepper motor). When pressing this button once, louver will move 1 step and stop.


8 **SEND** : Pressing **SEND** button is to confirm that the system is working as per your setting in remote.

9 **TIMER** : Pressing **TIMER** button is to do autostart/stop of the air-con.


- To do autostart, by pressing **TIMER** button during the system is off. And setting timer by pressing **HOUR, MIN.** as per your request.
- To do autostop, by pressing **TIMER** button during the system is on. And setting timer by pressing **HOUR, MIN.** as per your request.
- To cancel this function, by pressing **TIMER** again.

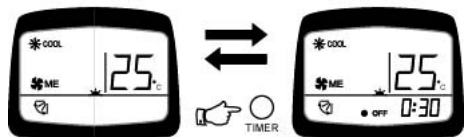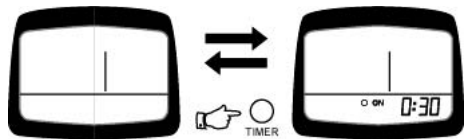

HOUR button is to set timer in hour unit range between 0-12 hour.

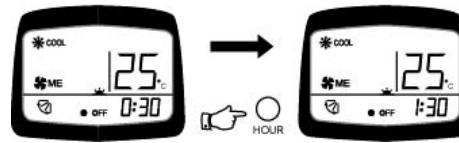

MIN. button is to set timer in minute unit It starts at 30 minute and increase in 10 minute each of pressing until 50 minute, it will reset to be 00 minute.

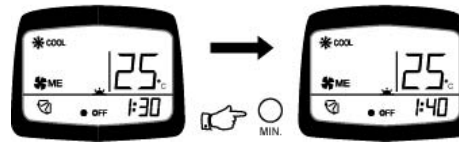

EMERGENCY ON/OFF (WITHOUT REMOTE)

POWER : Press this button to turn on/off the air-conditioner with the last setting of operation.